

Instructions for 6-Way Hinge Door Adjustment

6-WAY ADJUSTABLE HINGE



A B C

A: In & Out Adjustment

(see illustrations at right)

B: Up & Down Adjustment


(loosen to adjust)

C: Side to Side Adjustment

(clockwise to adjust out, counter clockwise to adjust in)

- » Guidelines are outlined at right for the adjustment of hinges to help correct alignment of door, if required.
- » Doors from 12" high to 36" high will include 2 hinges per door. Center hinge adjustment not applicable.
- » Doors 39" and above will include 3 hinges per door.

IN & OUT ADJUSTMENT (SIDE VIEW)

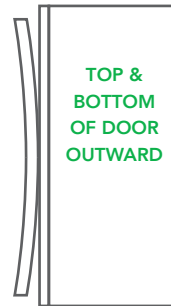

TOP &
BOTTOM
OF DOOR
OUTWARD

STEP 1

Adjust TOP Hinge

Turn Screw "A" Clockwise

STEP 2


Adjust BOTTOM Hinge

Turn Screw "A" Clockwise

STEP 3

Adjust MIDDLE Hinge

Turn Screw "A" Counter Clockwise

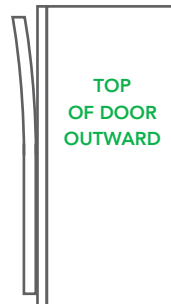

TOP
OF DOOR
OUTWARD

STEP 1

Adjust TOP Hinge

Turn Screw "A" Clockwise

STEP 2

Adjust MIDDLE Hinge

Turn Screw "A" Counter Clockwise

STEP 3

Adjust BOTTOM Hinge

Turn Screw "A" Counter Clockwise



BOTTOM
OF DOOR
OUTWARD

STEP 1

Adjust BOTTOM Hinge

Turn Screw "A" Clockwise

STEP 2


Adjust TOP Hinge

Turn Screw "A" Counter Clockwise

STEP 3

Adjust MIDDLE Hinge

Turn Screw "A" Counter Clockwise

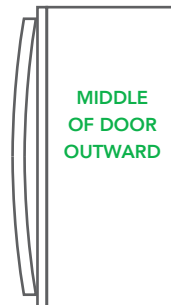

MIDDLE
OF DOOR
OUTWARD

STEP 1

Adjust MIDDLE Hinge

Turn Screw "A" Clockwise

STEP 2

Adjust TOP Hinge

Turn Screw "A" Counter Clockwise

STEP 3

Adjust BOTTOM Hinge

Turn Screw "A" Counter Clockwise

craft33[®]

