

Trash Pullout Installation Instructions



Installation Instructions for TPOS15, TPOD18, AND TPOD21

REQUIRED TOOLS

- Drill
- Craft33 Wax Fill Stick
- Trash insert
- Plastic Receivers
- Double-sided Foam Tape
- Jig #1, #2, and #3
- Magic Eraser®
- Glides
- Orange Receivers
- Screws

TRASH AND CABINET CONFIGURATION

Trash Pull Out	Base Cabinet
TPOS15 (single trash)	B15 or BFH15
TPOD18 (double trash)	B18 or BFH18
TPOD21 (double trash)	B21 or BFH21

STEP 1



- Using **Jig #1**, drill holes inside back left and right corners of cabinet.
This is where the plastic receiver will be mounted for the glides.
SEE STEP 3.



STEP 2



- Remove **glides** from box.
- Install **plastic receivers** into back left and right side of cabinet box where holes were drilled in **STEP 2**.




Plastic Receiver

STEP 3



- Install **glides** by sliding plastic receiver into the back of the cabinet.
- Reinforce by attaching glide to the inner frame using screws provided.

STEP 4

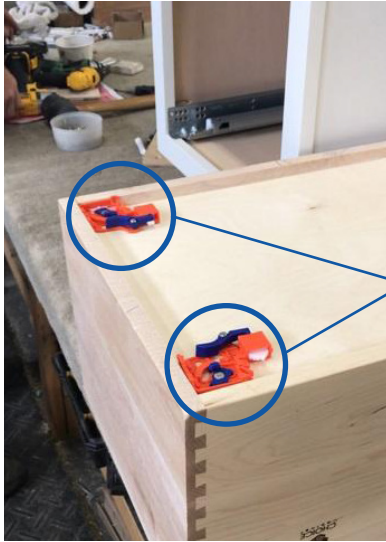

- Install **orange receivers** by drilling them into the front left and right corners on the base of the trash pullout.

Orange Receivers

STEP 5



- Install unit into cabinet.
- Use **Jig #1** or a level to verify that the unit sits flush and evenly with the frame.



Jig #1 (or a level)

QUESTIONS?

If you happen to have any questions or concerns during installation, please feel free to reach out to a Craft33 Customer Care representative, and we will be happy to walk you through the process.

Craft33
(234) 226-4915

craft33products.com